 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


M
AISIN

ON/OFF



CAUTION

· Inspection is required if the OPERATION lamp or the MALFUNCTION code flashes. Notify the flashing MALFUNCTION code to the service personnel. As to the content of malfunction indication, refer to manuals of the unit.

button is used for the inspection.

"NOT AVAILABLE" is

BRC1D52

-2A